

# SNMP

To switch the section to working mode, switch the slider to the On position.



SNMP Community

public

☐ Allow other devices to access UTM via SNMP

SNMP version

3

Username

Password

Encryption key

Trusted IP addresses and networks

These networks will receive data via SNMP

Add address

Location

Contact Information

Hostname

Save

This module allows you to monitor the operation of SafeUTM using the SNMP protocol versions 1/2c and 3. To do this, you need to configure the login, password, and encryption key.

You can also add IP addresses and networks to trusted ones so that they can access data from SafeUTM. **Location**, **Contact information**, and **Hostname** fields are only for information and are optional.



SNMP Community  
public

☒ Allow other devices to access UTM via SNMP

SNMP version  
3

Username

Password

Encryption key

Trusted IP addresses and networks

These networks will receive data via SNMP

Add address

Location

Contact Information

Hostname

Save

Revision #4

Created 25 August 2022 00:57:20 by Val Redman

Updated 13 October 2022 14:53:53 by Val Redman